



# Enertrek C32

## 说明书

### Enertrek C32


#### Instructions

## 产品配置指南


### Product Configuration Guide

Enertrek C 32

- 10:以太网/Ethernet
- 20:Wi-Fi 通用芯片/Wi-Fi
- 30:4G 通用芯片/4G
- 31:4G,涂鸦,1拖多MT53RST  
4G, Tuya, 1-to-Multi-Connect MT53RST
- 32:4G,涂鸦,1拖二 MT53RST  
4G, Tuya, 1-to-2 MT53RST
- 33:4G,涂鸦,1拖二 MT88M  
4G, Tuya, 1-to-2 MT88M
- C:通信模块  
C: Communication module
- 产品系列名称/Product Series

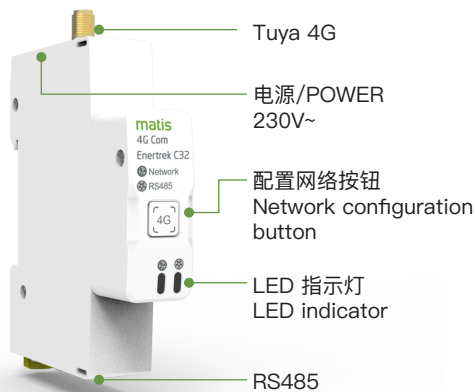

## 端子说明/Terminal description

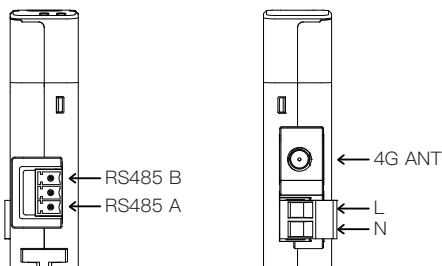

## LED 指示灯/LED Indicator

### 网络状态 / Network Status

|                                              |                                                        |
|----------------------------------------------|--------------------------------------------------------|
| 绿灯常亮<br>Green light always on                | 设备正常运行<br>The device is running normally               |
| 绿灯慢闪 (1s)<br>Green light flashing slowly(1s) | 正在注册或连接4G网络<br>Registering or connecting to 4G network |
| 绿灯熄灭<br>Green light off                      | 无SIM卡或网络未连接<br>No SIM card or network not connected    |

### RS485 状态 / RS485 Status

|                             |                                                    |
|-----------------------------|----------------------------------------------------|
| 绿灯闪烁<br>Green light flashes | 正在进行Modbus RTU通信<br>Modbus RTU communication is in |
|-----------------------------|----------------------------------------------------|

|                         |                                                                        |
|-------------------------|------------------------------------------------------------------------|
| 绿灯熄灭<br>Green light off | 未检测到下行设备活动或掉线<br>No downlink device activity detected or disconnection |
|-------------------------|------------------------------------------------------------------------|

## 使用说明/Instructions

- 1.应用商店搜索“涂鸦”，下载安装App并注册账号；
- 2.设备上电等待30s左右，直至网络指示灯绿灯慢闪，设备进入配网状态；网络状态灯绿灯长亮表明设备连接服务器成功；
- 3.打开“涂鸦”App，按如下提示进行配网操作：

#### 【无线配网】

- a.点击右上角“+”，选择“扫一扫”扫描设备上的二维码进行添加；
- b.扫码后点击完成，设备将自动添加到App中；

#### 【添加子设备】

- 1，点击“涂鸦”App内的采集器设备，进入采集器设备页面；
- 2，点击页面下方的扫码添加子设备按钮，选择“扫码形式，扫子设备上的二维码”，获取子设备SN号后，点击添加，等待15秒，子设备会自行添加到APP上；

1. Search for 'Tuya' in the app store or scan the following QR code, download and install the app, and register an account;
2. Upon power-up, the device will enter a pairing mode after approximately 30 seconds, indicated by a slowly flashing green network light. A successful connection to the server is then confirmed by a solid green light.
3. Open the 'Tuya' app and follow the prompts below to operate the distribution network;

#### 【Wireless Distribution Network】

- a. Click on the '+' in the upper right corner and select 'Scan' to scan the QR code on the device and add it;
- b. After scanning the code, click 'Finish' and the device will be automatically added to the app;

#### 【Add Sub Devices】

- 1, Click on the collector device in the 'Tuya' app to enter the collector device page;
- 2, Click the 'Scan Code to Add Sub Device' button at the bottom of the page, select 'Scan Code Form - Scan QR Code on Sub Device', obtain the SN number of the sub device, click 'Add', wait for 15 seconds, and the sub device will be added to the APP by itself;

技术参数/Technical Parameter

|                            |                                                                               |
|----------------------------|-------------------------------------------------------------------------------|
| 电源输入<br>Power input        | AC 100—240V, 50/60 Hz                                                         |
| RS485接口<br>RS485 interface | 1路差分接口, Modbus RTU主站<br>1-channel differential interface<br>Modbus RTU master |

|                        |                    |
|------------------------|--------------------|
| 上行网络<br>Uplink network | 涂鸦 APP<br>Tuya APP |
|------------------------|--------------------|

|                        |                                                      |
|------------------------|------------------------------------------------------|
| SIM卡槽<br>SIM card slot | Micro-SIM卡 (15mmx12mm)<br>Micro-SIM card (15mmx12mm) |
|------------------------|------------------------------------------------------|


|                           |                       |
|---------------------------|-----------------------|
| 天线接口<br>Antenna interface | 外置SMA<br>External SMA |
|---------------------------|-----------------------|

|              |                                                                                                                                                               |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 按键<br>Button | 短按 添加子设备 ;<br>长按10S 删除所有子设备, 恢复出厂设置;<br>Press shortly: Add sub-device.<br>Press and hold for 10 seconds: Delete all sub-devices and restore factory settings. |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                  |                                                |
|------------------|------------------------------------------------|
| 指示灯<br>Indicator | 网络状态、RS485 活动<br>Network Status、RS485 Activity |
|------------------|------------------------------------------------|

|                             |                |
|-----------------------------|----------------|
| 工作温度<br>Working temperature | -10 ℃ ~ + 55 ℃ |
|-----------------------------|----------------|

尺寸/Dimension (mm)

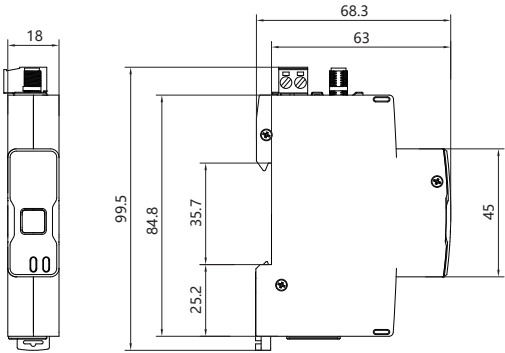

⚠ 危险/Danger

- 存在触电风险:  
There is a risk of electric shock
- 在操作前, 必须仔细阅读本安装说明。
  - Before operation, carefully read this installation manual.
  - 所有操作应由具备相应资质并通过安全培训的专业人员进行。
  - All work must be done by trained professionals.
  - 在带电环境中安装或维护设备可能导致严重人身伤害或死亡。
  - Working on energized equipment can cause severe injury or death.

注意/Attention

- 存在电击或设备损坏风险  
There is a risk of electric shock or equipment damage
- 请在断电状态下进行接线、检修或更换部件。
  - Perform all wiring and maintenance with power off.
  - 使用前应确保电压、电流及互感器规格与本产品匹配。
  - Ensure voltage and current specifications match before use.
  - 不当的安装、接线或环境条件可能影响测量精度或导致设备损坏。
  - Improper installation, wiring, or environment may affect accuracy or damage the device.

\*麦豆电气对因未遵守本安装说明书中警告或注意事项而造成的任何人身或财产损失不承担任何责任。  
Matis is not liable for damages resulting from non-compliance with this manual's warnings.